


T12 Vanagon Air Scoop Installation Instructions

With no assembly required, simply install each scoop as described in the following pages, taking note that there is a left and right hand version. The reinforcement bead on each scoop is to be the unsupported, outboard edge:




T12 Vanagon Air Scoop Installation Instructions

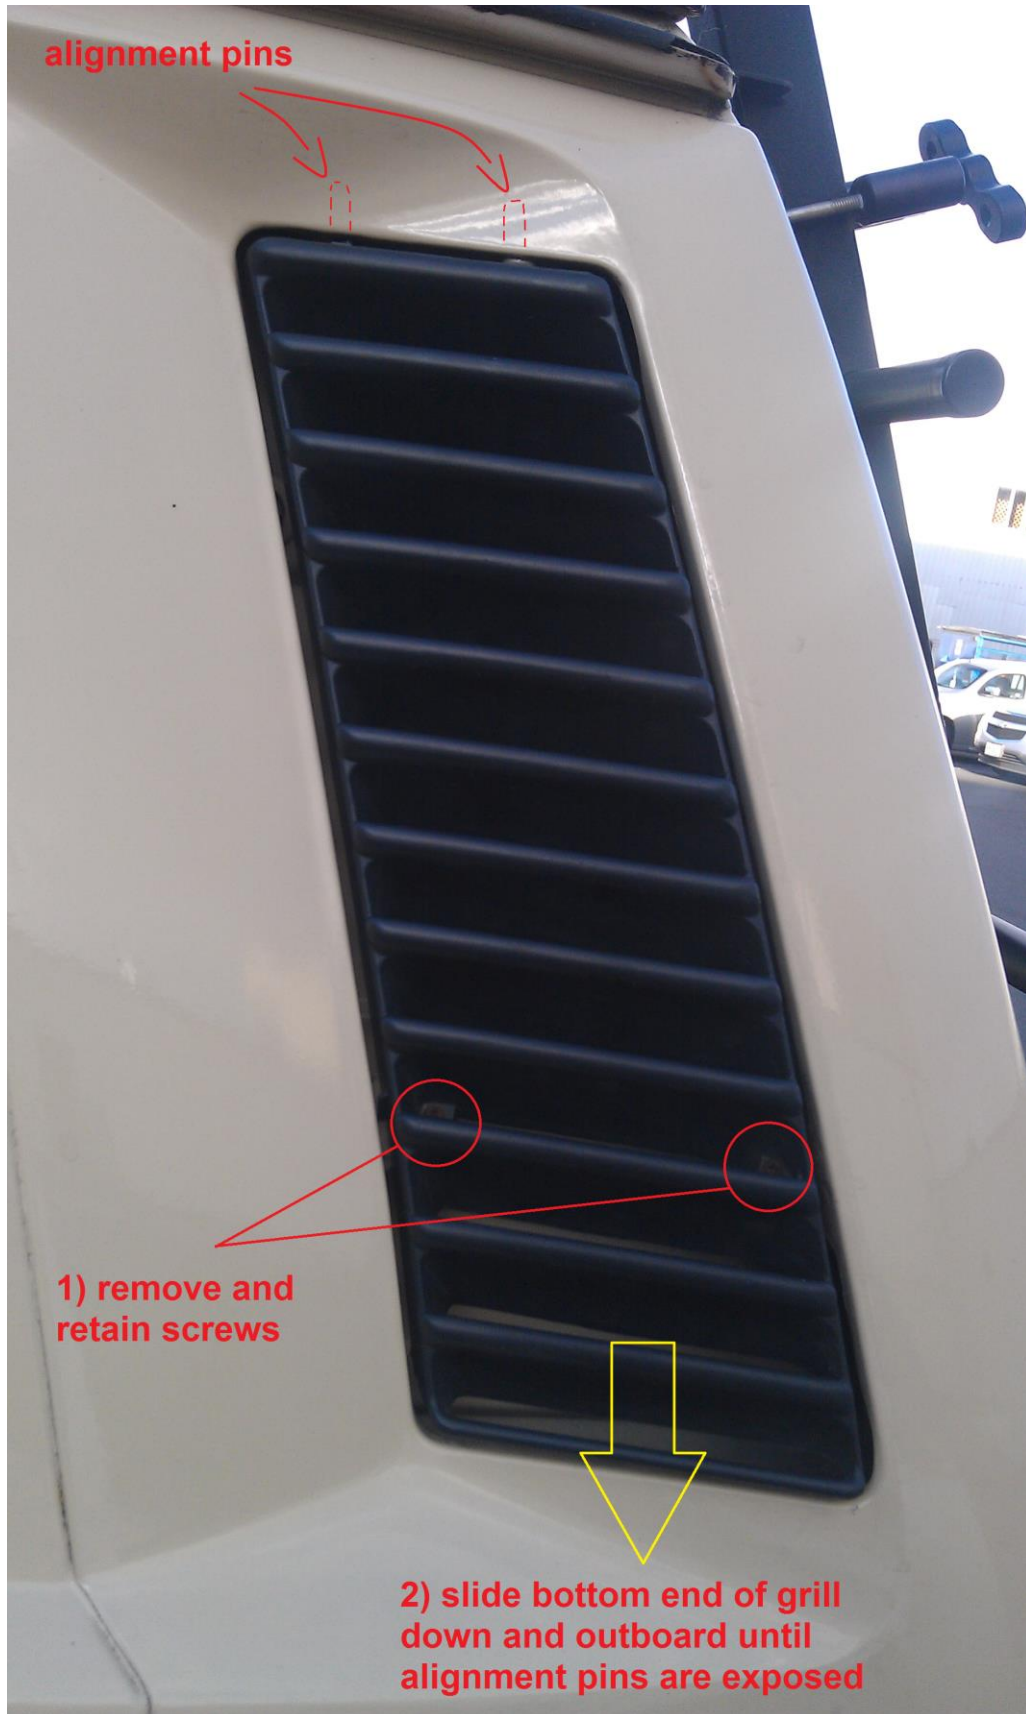

T12 Vanagon Air Scoop Installation Instructions



T12 Vanagon Air Scoop Installation Instructions

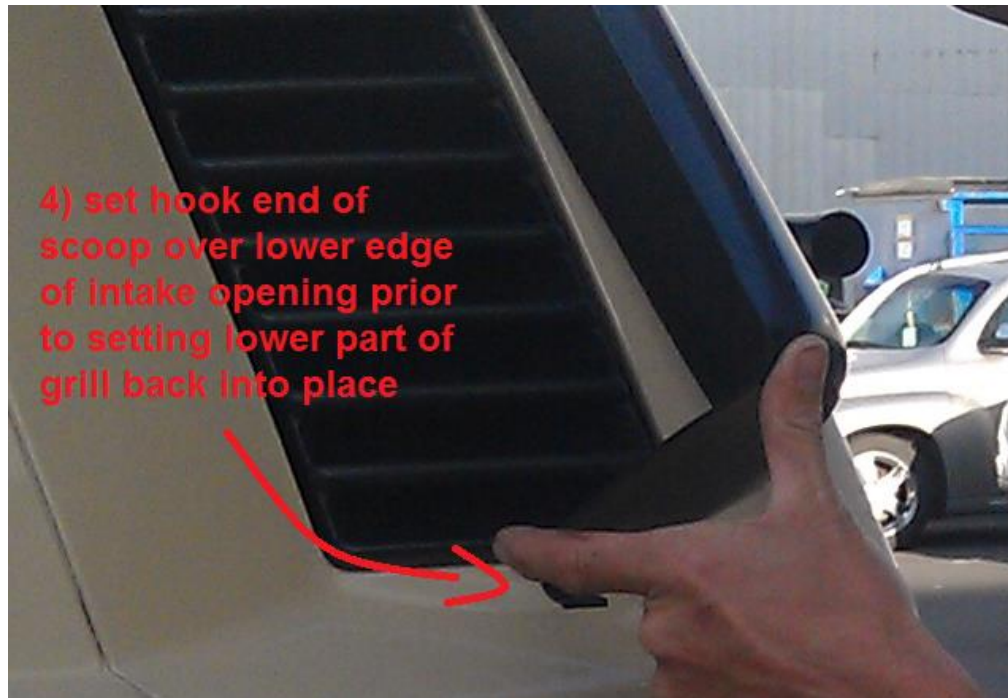

5) Reinstall screws. As there isn't much room to maneuver a regular screwdriver at the aft location, we recommend using a stubby Phillips driver.